

Height Wand

revised Nov 15, 2010



- Some mechanisms work the opposite to what is described here
- Wand in locked position (top photo)
- Push wand to the right to unlock the height adjustment
- Wand in the unlocked position (bottom photo)
- Adjust the height
- Pull the wand back to the locked position

