





ResponseCard RF LCD and ResponseCard RF User Guide

Changing the Channel

1. Press and release the  button.
2. While the light is flashing red and green enter 2 digit code.
(i.e. channel 1=01, channel 21=21).
3. After the second digit is entered, press and release the  button.


LED Color Description

Red - Response was not received

Green - Response was received

Yellow (Multiple Flash) - Sending

Yellow (Single Flash) - Polling not open

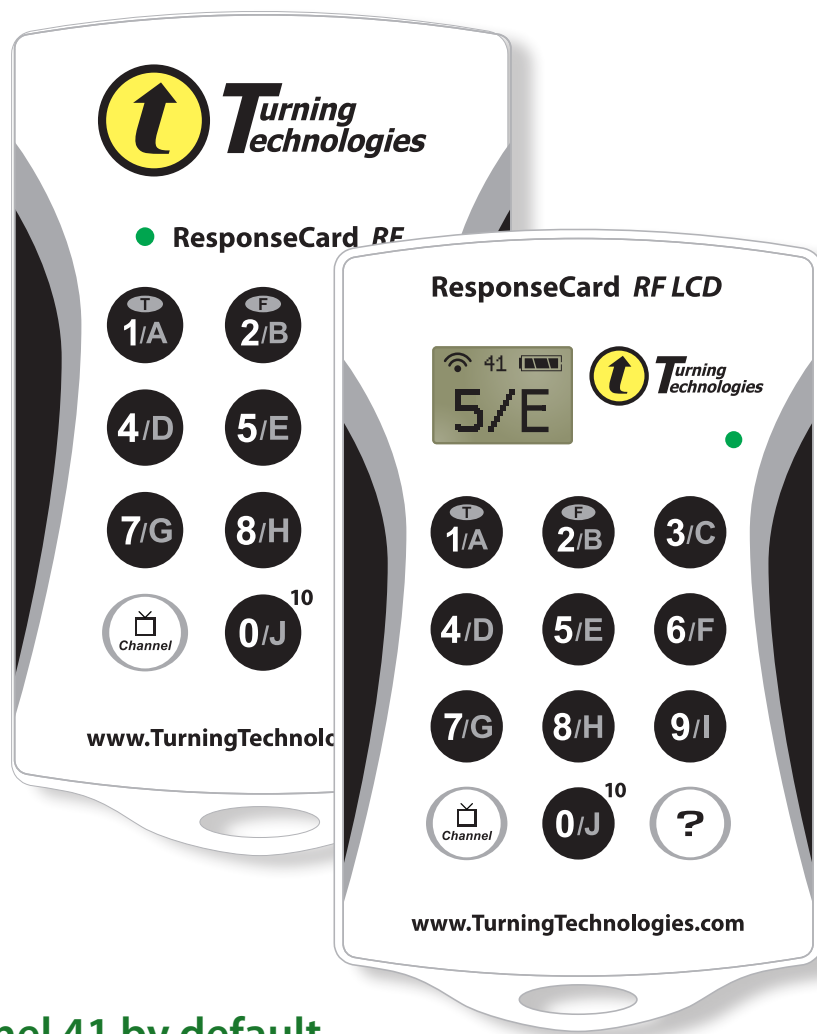

ResponseCards are set to Channel 41 by default.

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

IC Statement

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference received, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.